

#### Features

- Flex Saver Easy is able to hold up to 4 hydraulic hoses (depending on the diameter) and to guide them with a possibility to rotate from the hydraulic kit on the tractor to the connected trailer. The guide avoids premature wear of hoses.
- Mounting is simple; slotted holes with clamp plates enable the guide to be fitted to any chassis without welding.
- The guide arm is robust and partially manufactured in high tensile steel. The guide arm is electrolytically zinc-plated as anti-corrosion protection.

## **Specifications**

Chassis widths	495 < 710 mm		
Weight	11 kg		
Torque setting M12x50	Max. 50 Nm		
Torque setting M8x50	Max. 10 Nm.		
Torque setting M12	Max. 50Nm		

#### Assembly

- Mount the top part on the base part: the disc should be on top of the base part; the washers, spring and nut below the base part.
- 2. Tighten the primary nut so that the arm can still pivot (but with some resistance).
- 3. Tighten the extra locknut against the primary nut with a torque of 50Nm.

## Installation


- 1. Manoeuvre the guide arm diagonally between the truck chassis frame.
- 2. Determine the position of the guide arm correctly:
  - a. Make sure that once the hoses are fitted the tractor can steer freely without pulling or crushing the hoses.
  - b. Check if the guide arm can't touch any components on the tractor (e.g.fuel tank gauge, return filter, filler cap).
- Fasten the clamps under the chassis frame by tightening the 4 bolts (max. torque: 50Nm), ensure the clamps are at least 15mm on each side under the chassis frame.
- 4. Place the hose(s) into the guide arm and tighten the M8 bolts (max. torque: 10Nm), so the plates hold the hose(s) in place.

### Options

- If the guide arm is touching any components, add spacer kit 14801115 to increase the height to total of 70mm.
- Use the 4 holes (dia. 35mm) in the base part for mounting bulkheads.
- $\cdot\,$  Use the slotted holes in the top part for clamping additional hoses with tie-wraps.




## FEMALE QUICK RELEASE COUPLING

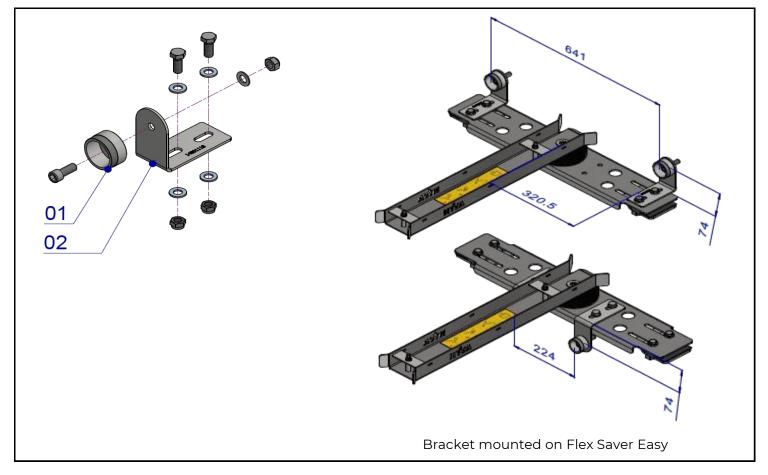

No.	Part no.	Description	No.	Part no.	Description
1	14785406	retainer BSP 3/4" (for 01332650 or 01332600)	2	14801118	Mounting bracket + fastener kit
1	14785405	retainer BSP 1" (for 01332625)			QR Mounting kit:
	-				- Mounting bracket (x1)
					- Bolt M12x45 (x1)
					- Hex. Head bolt M12x30 (x2)
					- Hex. Locking nut M12 (x2)
					- Hex. Nut M12 (x2)
					- Plain washer M12 (x5)



# MALE QUICK RELEASE COUPLING

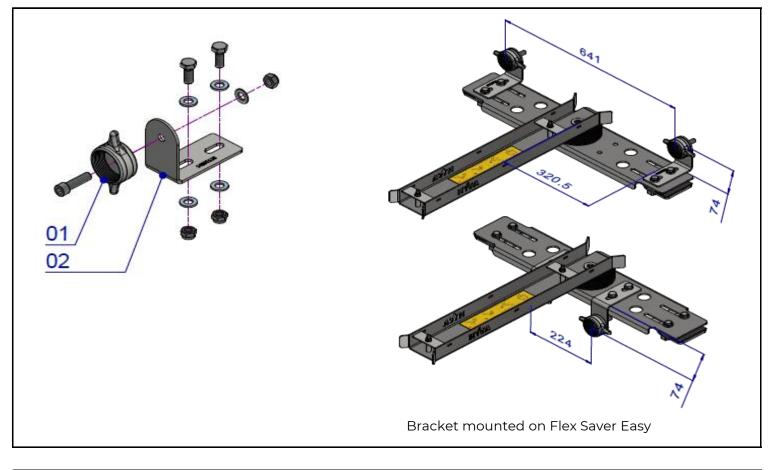

No.	Part no.	Description	No.	Part no.	Description
1	01332621	wing nut 3/4" + spacer (for 01332605 or 01332655)	2	14801118	Mounting bracket + fastener kit
1	01332646	wing nut 1" + spacer (for 01332630)			QR Mounting kit:
					- Mounting bracket (x1)
					- Bolt M12x45 (x1)
					- Hex. Head bolt M12x30 (x2)
					- Hex. Locking nut M12 (x2)
					- Hex. Nut M12 (x2)
					- Plain washer M12 (x5)